


Montagehinweis Aquapump Retrofit


DE: zusätzliche Hinweise zur Montage von Tauchpumpen im bauseitigem Schacht

❗ Der Anlage beiliegende Dokumentation (EBA 010-992) ist zu beachten.

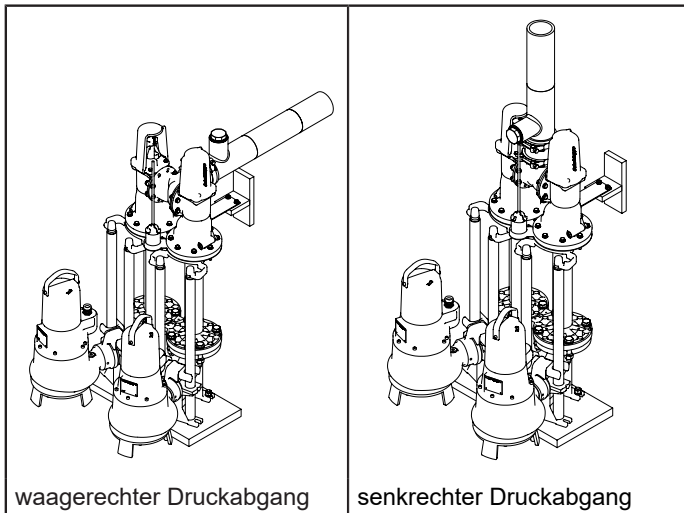

❗ Umbau des Druckabgangs von waagrecht auf senkrecht (als auch umgekehrt) durch Lösen der 16 Verbindungsschrauben am T-Stück möglich.

Pos.-Nr.	Komponente
(1)	Zulauf
(2)	Pumpe(n)
(3)	Hülsrohr mit Pegelsonde (Niveauerfassung)
(4)	Absperrschieber mit Rückschlagklappe
(5)	Grund- / Montageplatte (30mm) für Pumpenfuss
(6)	Seitenplatte /Wandhalterung (20mm) für Druckverrohrung
(7)	Druckabgang (PE-HD, SDR11)

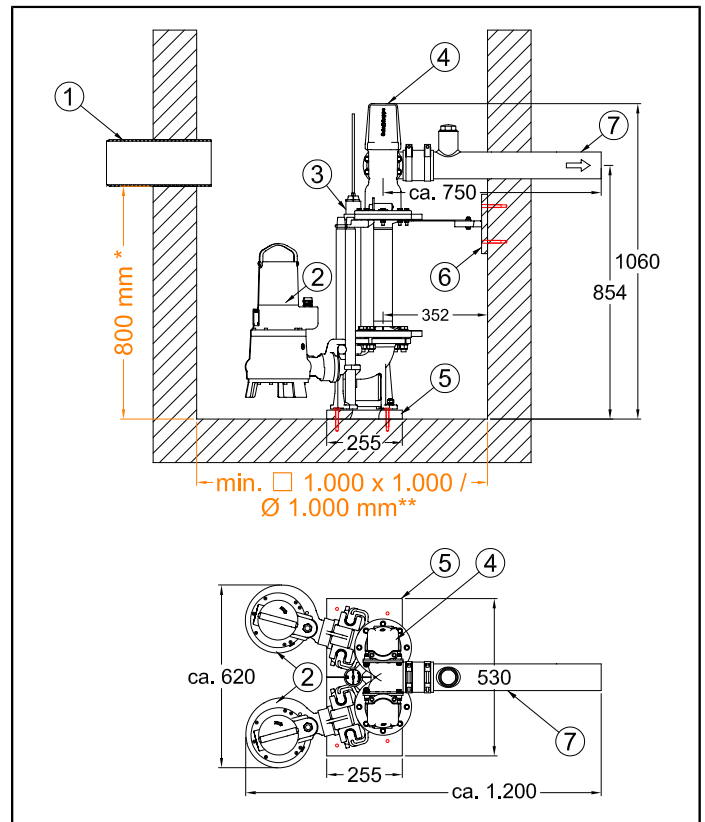

(*)	Mindestzulaufhöhe > 800 mm
(**)	Mindestgrundfläche > □ 1.000 x 1.000 / Ø 1.000 mm

Zur Montage wie folgt vorgehen:


- Die Pumpengrundplatte [5] muss eigenständig 4x durchbohrt [A] werden und mit Hilfe von vier Verschraubungspunkt (bauseitig) [B] am Schachtboden befestigt werden.
- Die Pumpenbefestigungsplatte [6] muss ggf. eigenständig 2x durchbohrt [C] werden und mit Hilfe von zwei Verschraubungspunkten (bauseitig) [D] an der Schachtwand befestigt werden.

❗ Die geeignete Verschraubungsart ist selbstständig zu wählen. Bei der Bohrtiefe ist auf die Wandstärke des bauseitigen Behälters zu achten.

Wir empfehlen eine korrosionsbeständige Verbindung mittels Schwerlastanker.

Pos.-Nr.	Komponente
(A)	Bohrloch (4x) in Grundplatte
(B)	Schwerlastanker zur Verschraubung am Schachtboden
(C)	Bohrloch (2x) in Seitenplatte
(D)	Schwerlastanker zur Verschraubung an Schachtwand

Hinweis: Darstellungen zeigen Duo-Anlagen. Abmessungen der Grundplatte für Duo- und Mono-Anlagen ist baugleich. Bei Mono-Anlagen wird die Pumpe rechts aufgehängt.

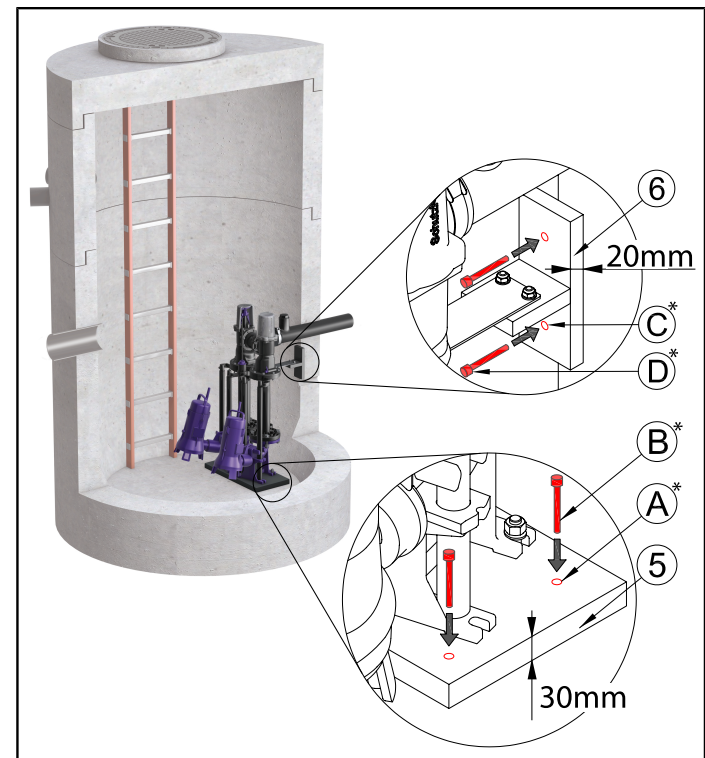


(*)	bauseitig
-----	-----------

Installation information for the *Aquapump Retrofit*

EN: Additional information for the installation of submersible pumps in a chamber module on site

❗ Observe the documentation (EBA 010-992) enclosed with the system.

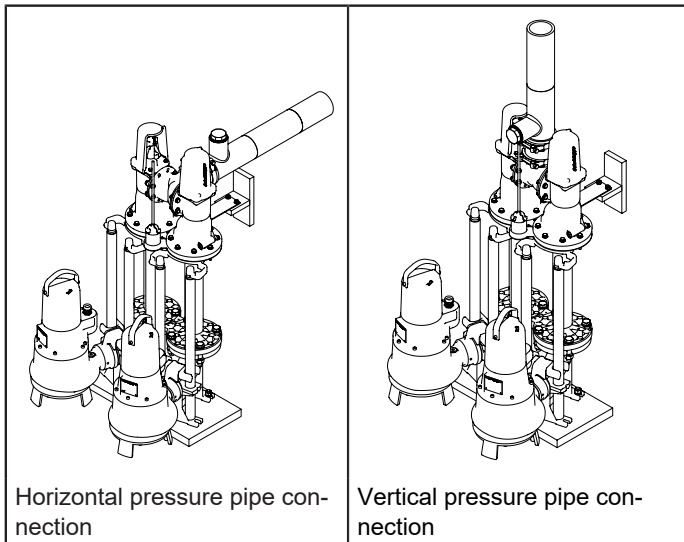

❗ The pressure pipe connection can be converted from horizontal to vertical (or vice versa) by loosening the 16 connecting screws on the T-piece.

Item no.	Component
(1)	Inlet
(2)	Pump(s)
(3)	Sleeve tube with level probe (level measurement)
(4)	Shut-off valve with non-return flap
(5)	Base / mounting plate (30 mm) for pump foot
(6)	Side plate / wall bracket (20 mm) for pressure piping
(7)	Pressure pipe connection (HDPE, SDR11)

To install, proceed as follows:


- Drill the pump base plate [5] independently 4x [A] and fasten it to the base of the chamber module with the aid of four screw connection points (on site) [B].
- Drill the pump mounting plate [6] independently 2x [C] and fasten it to the wall of the chamber module with the aid of two screw connection points (on site) [D].

❗ The appropriate type of screw connection must be selected independently. With regard to the drilling depth, the wall thickness of the on-site tank must be taken into account.


We recommend a corrosion-resistant connection using heavy-duty anchors.

Item no.	Component
(A)	Drill hole (4x) in the base plate
(B)	Heavy-duty anchors for screwing to the base of the chamber module
(C)	Drill hole (2x) in the side plate
(D)	Heavy-duty anchors for screwing to the wall of the chamber module

Note: Illustrations show Duo systems. The dimensions of the base plate for Duo and Mono systems are identical. For Mono systems, the pump is suspended on the right.

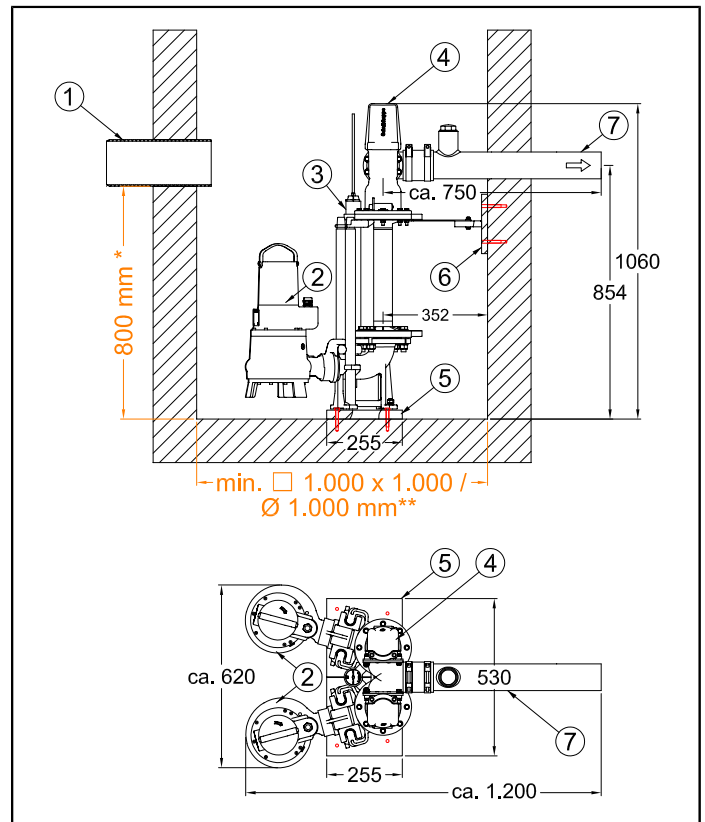

(*)	Minimum inlet height > 800 mm
(**)	Minimum footprint > □ 1,000 x 1,000 / Ø 1,000 mm

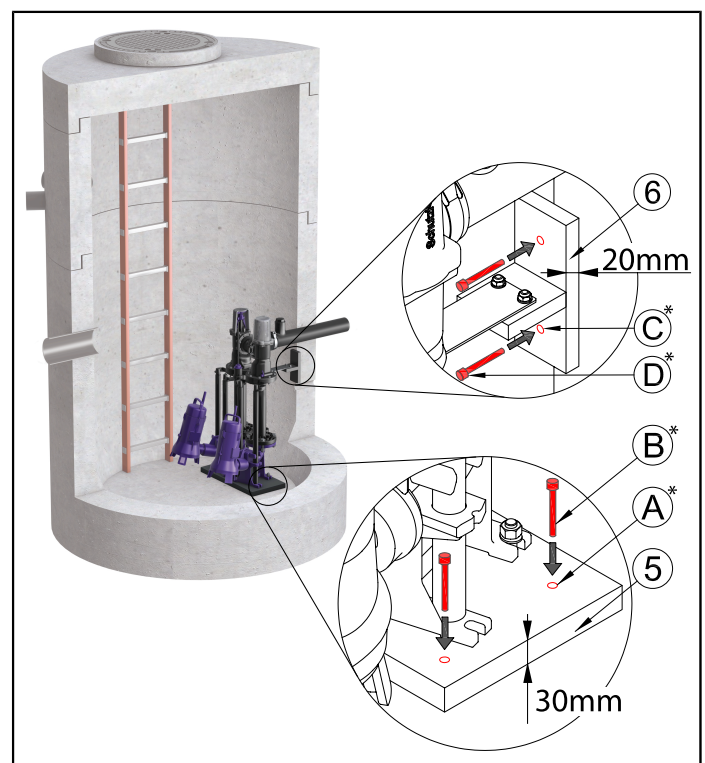

(*)	On site
-----	---------